

General Safety Rules

Check instructions before use.

A RISK ASSESSMENT must be carried out before assembly and use of this equipment.

1. Do not use any Stair access tower which is damaged, which has not been properly assembled, which is not firm and stable and which has any missing or damaged parts.
2. Do not erect a Stair access tower on unstable ground or objects such as loose bricks, boxes or blocks. Only a sound rigid footing must be used.
3. Ensure that the Stair access tower is always level and the adjustable legs nuts are engaged. The tower must be built with base plates and positioned as close to the stair risers as possible.
4. Ensure that all frames, braces and platforms are firmly in place and that all locking hooks are functioning correctly. Ensure that all frame locking clips are engaged. Always pass the equipment up and down the tower. Never throw the equipment.
5. Ensure that the Stair access tower is within the maximum platform height stated, and that the appropriate side props or stabilisers are fitted.
6. Stair access towers should, wherever possible be secured to the building or other solid structure. It is good practice to tie in all Stair access towers of any height, especially when they are left unattended. *When used, select and install anchors in concrete and masonry must be selected and installed in accordance with BS 8539. This prefabricated tower scaffold has been designed to be properly secured to a suitable adjacent supporting structure capable of withstanding the forces that will be imposed upon it by the attachment of the tower. Devices for securing the tower must be simultaneously rigid in both tension and compression and capable of withstanding and transmitting the loads imposed by the tower to the supporting structure. If balance is necessary, it must be secured in position and made of rigid materials such as steel or concrete, but excluding liquids or granular materials.*
7. Do not lean ladders against the Stair access tower.
8. Never climb the outside of the Stair access tower or climb on Horizontal or Diagonal braces. Do not gain access or descend from the platforms other than by the trapdoor platform and built in ladder.
9. Guardrails must be fitted to ALL platforms. Toe-boards must be fitted to any working platform or platform where materials are stored.
10. Never jump on to or off platforms.
11. DO NOT exceed the safe working load of the platform or structure by accumulating debris, material or tools on platforms as these can be a significant additional load.
12. NEVER extend your adjustable legs to achieve extra height, these are for levelling only.
13. NEVER use a ladder or other objects on the platform to achieve additional height.
14. It is not permissible to attach and use hoisting facilities on Stair access towers, unless specifically provided for by the manufacturer.
15. It is not permissible to attach bridging sections between a Stair access tower and a building.
16. STABILIZERS improve the STABILITY of the Stair access tower. Position the SIDE PROPS symmetrically to obtain MAXIMUM STABILITY.
17. NEVER move your tower while it is erected. To move your tower you must first dismantle it. The tower should also never be lifted or suspended.
18. Platforms must be installed with vertical distances between them not exceeding 2.1 m when assembling and dismantling. The maximum number of people on a working platform level permitted to simultaneously exert a horizontal load of 30 kg is: 1 person per bay for bays less than 4 m in length and; 2 persons per bay for bays greater than 4 m in length. The weather forecast must be taken into account before use.

General Maintenance Rules

1. Ensure that the Stair access tower is kept clean, especially the spigots and sockets. These should fit together with ease and be secured by an interlock clip.
2. Check frames and braces, adjustable legs and boards for paint, grit, burrs etc. Remove any foreign substance with a light wire brush. Check no slip hazards exist on the platform.
3. Where brace, ladder and platform hooks attach the frames, ensure that the frame rungs are kept clean.
4. Ensure that all locking hooks function correctly. If necessary lubricate with light oil.
5. The inside diameter of all hooks should be kept clean to ensure they fit to other components without being forced.
6. If in any doubt about the proper use and maintenance of the Stair access tower equipment, consult the manufacturer.
7. Do not misuse or abuse the Stair access tower with heavy objects, hammers etc.
8. Do not throw components in and out of vehicles or to the ground when the tower is being dismantled. Such abuse may reduce the structural integrity of the Stair access tower.
9. Under no circumstances use a Stair access tower which is damaged, has not been properly assembled, has any missing parts.

If you would like a copy of the design certificate please contact Euro Towers.

STAIR ACCESS TOWER



Tower Info

For safe access on both indoor and outdoor

The basic stair access tower pack provides a platform level from the lowest step and can be used up to working heights of 10m.

The Stair Access Tower can be used with Euro Towers 3T Ladder equipment meaning you can have existing stock in your yard.

Easy access from both sides of the tower is provided by a gate. This frame design solves the problems experienced on narrow domestic staircases, enabling a safe point of access to the tower and up to the platform.

MAX SAFE WORKING HEIGHT

Structure
Platform

Optional Extra's

Aluminium Toeboard
No Bump Impact Protection

MAX SAFE WORKING HEIGHT FOR PLATFORM STRUCTURE



EURO TOWERS LTD

UK Manufacturer of Aluminium Access Equipment

Tel: +44 (0) 1604 644 774 | Web: www.EuroTowers.co.uk | Email: Sales@eurotowers.co.uk
Euro Towers Ltd, Unit 5, Edgemead Close, Round Spinney Ind Est, Northampton, NN3 8RG

For more information or any questions please contact Euro Towers LTD

Phone: 01604 644 774 Email: enquiries@eurotowers.co.uk Web: www.eurotowers.co.uk

Address: Euro Towers LTD, Unit 5 Edgemead Close, Round Spinney, Northampton, NN3 8RG

12. NEVER extend your adjustable legs to achieve extra height, these are for levelling only.

13. NEVER use a ladder or other objects on the platform to achieve additional height.

2.25m Tower Build



Insert 2 adjustable legs into each of the portal frames



Fit the offset ladder frame* on to the ladder portal frame & position the frame down the stairs.



Position the plain portal at the top of your stairs then fit the horizontal braces above the 1st rung.




Position the ladder portal at the bottom of your stairs and connect the horizontal braces above the 3rd rung. Level the tower by adjusting the legs.



Fit diagonal brace from bottom rung of ladder portal frame to bottom rung of plain portal frame, on the left hand side.



Fit another diagonal from the bottom rung of the plain portal frame to the top rung of ladder portal frame on the right hand side.

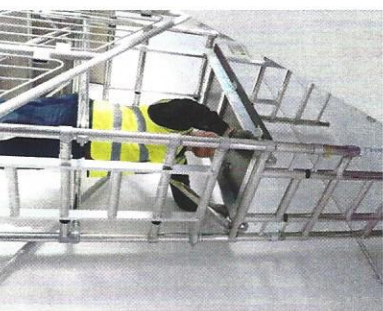

Fit a platform to the 3rd rung of the plain portal frame, trapdoor at the ladder frame side.



Sitting through the platform, fit 2 guardrail frames, one either side or 4 Horizontal braces 2 either side with hooks facing out. Ensure hooks are fully engaged.



Fit a side prop to the top of each frame, one either end of the tower and then fit your Toe-boards to the tower. Dismantling is the reverse of assembly

Extra Heights Build



Fit a plain 4 rung frame to the plain portal frame and engage the interlock clips.



Fit a diagonal brace from the 2nd rung above the platform to the second rung of the 4 rung plain frame.



Fit a plain 4 rung frame to the tower ladder portal frame and engage interlock clips.



Fit a platform to the 2nd rung of the 4 rung plain frame with the trapdoor on the ladder frame side.



Sitting through the platform, fit 2 guardrail frames, one either side or 4 Horizontal braces 2 either side with hooks facing out. Repeat steps 1 - 5 to build additional heights. Ensure hooks are fully engaged.



Fit 2 side props every 2m, one at each end of the tower. If you cannot props, stabilizers shall be fitted at 4 corners of the tower. They shall be fitted to create the largest footprint possible. Then fit your toe-boards. Dismantling is the reverse of assembly

Stair Access Tower Kit List

Platform Height	SWAL	PKT4	SPPF	SPLF	FSL2	FKS4	FSL4	SASF	BKH4	BKD4	TLK4	TKSW
2.25m	4	1	1	1	1	1	1	2	2	2	2	2
4.10m	4	2	1	1	1	1	1	4	2	3	2	2
5.96m	4	3	1	1	1	1	2	6	2	4	2	2
7.81m	4	4	1	1	1	1	3	8	2	5	2	2
9.67m	4	5	1	1	1	1	4	10	2	6	2	2

*Offset frame will depend on the length of tower and the stairs used.