


evolution®

www.evolutionpowertools.com

evoMAG²⁸

Original Instructions

Machines shown without guards fitted for illustrative purposes only.

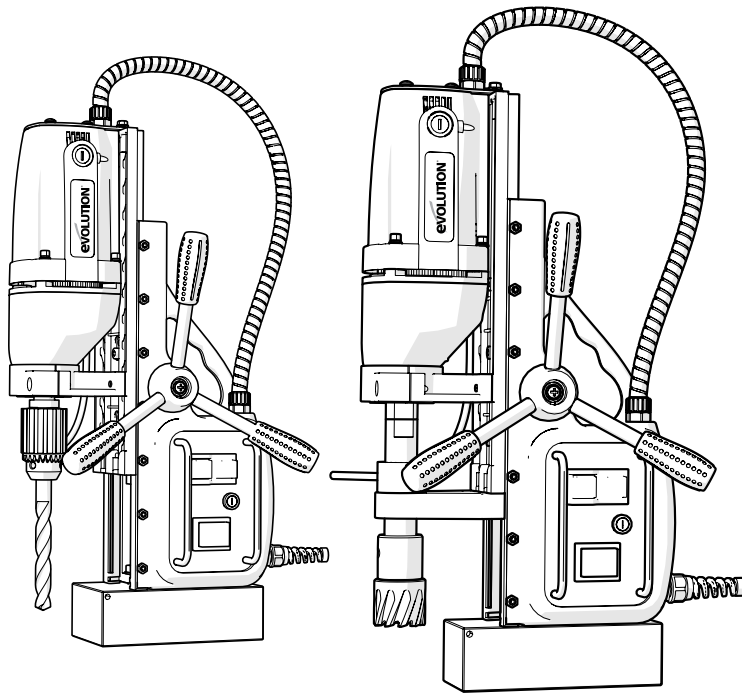

evOLUTION[®]

ENGLISH

Original Instructions

EN

ES

FR

TABLE OF CONTENTS

English	Page 2
Español	Página 24
Français	Page 48
INTRODUCTION	Page 5
Guarantee	Page 5
Machine Specifications	Page 6
Vibration	Page 7
Labels and Symbols	Page 8
Intended use of this Power Tool	Page 8
Prohibited use of this Power Tool	Page 9
SAFETY PRECAUTIONS	Page 10
Electrical Safety	Page 10
Outdoor Use	Page 10
General Power Tool Safety Instructions	Page 11
Additional Safety Instructions	Page 12
GETTING STARTED	Page 14
Unpacking	Page 15
Machine Overview	Page 15
Assembly and Preparation	Page 16
Operating Instructions	Page 18
MAINTENANCE	Page 21
Environmental Protection	Page 21
DECLARATION OF CONFORMITY	Page 22

(1.2)

This Instruction Manual was originally written in English.

(1.3)

IMPORTANT

Please read these operating and safety instructions carefully and completely. For your own safety, if you are uncertain about any aspect of using this equipment please access the relevant Technical Helpline, the number of which can be found on the Evolution Power Tools website. We operate several Helplines throughout our worldwide organization, but Technical help is also available from your supplier.

WEB

www.evolutionpowertools.com/register

(1.4)

Congratulations on your purchase of an Evolution Power Tools product. Please complete your product registration 'online' as explained in the A4 online guarantee registration leaflet included with this machine. You can also scan the QR code found on the A4 leaflet with a Smart Phone. This will enable you to validate your machine's guarantee period via Evolution's website by entering your details and thus ensure prompt service if ever needed. We sincerely thank you for selecting a product from Evolution Power Tools.

EVOLUTION LIMITED GUARANTEE.

Evolution Power Tools reserves the right to make improvements and modifications to the product design without prior notice.

Please refer to the guarantee registration leaflet and/or the packaging for details of the terms and conditions of the guarantee.

(1.5)

Evolution Power Tools will, within the guarantee period, and from the original date of purchase, repair or replace any goods found to be defective in materials or workmanship. This guarantee is void if the tool being returned has been used beyond the recommendations in the Instruction Manual or if the machine has been damaged by accident, neglect, or improper service. This guarantee does not apply to machines and / or components which have been altered, changed, or modified in any way, or subjected to use beyond recommended capacities and specifications. Electrical components are subject to respective manufacturers' warranties. All goods returned defective shall be returned prepaid freight to Evolution Power Tools. Evolution Power Tools reserves the right to repair or replace it with the same or equivalent item. There is no warranty – written or verbal – for consumable accessories such as (following list not exhaustive) blades, cutters, drills, chisels or paddles etc. In no event shall Evolution Power Tools be liable for loss or damage resulting directly or indirectly from the use of our merchandise or from any other cause. Evolution Power Tools is not liable for any costs incurred on such goods or consequential damages. No officer, employee or agent of Evolution Power Tools is authorized to make oral representations of fitness or to waive any of the foregoing terms of sale and none shall be binding on Evolution Power Tools.

Questions relating to this limited guarantee should be directed to the company's head office, or call the appropriate Helpline number.

EN

ES

FR

SPECIFICATIONS

MACHINE	METRIC	IMPERIAL
Motor (UK) 230V ~ 50/60Hz	1200W	5A
Motor (UK) 110V ~ 50/60Hz	1200W	11A
Motor (USA) 120V ~ 60Hz	1200W	10A
Number Of Speeds	1	1
Speed (No Load)	570min ⁻¹	570rpm
Insulation Class	1	1
Power Cord Length	2.6m	8' 5"
Weight	14kg	31lb
CUTTER CAPACITIES		
Maximum Annular Cutting Capacity	28mm	1-1/8"
Maximum Cutting Depth	50mm	2"
Cutter Shank	19mm	3/4"
Standard Twist Drill Capacity	13mm	1/2"
MAGNET		
Magnetic Adhesion	1300kg f	2860lbs f
Minimum Plate Thickness	10mm	3/8"
DIMENSIONS		
Magnet Dimension	50 x 80 x 164mm	2 x 3-1/8 x 6-1/2"
Maximum Machine Height	585mm	23"
Minimum Machine Height	450mm	17-3/4"
Machine Width	225mm	8-7/8"
NOISE & VIBRATION		
Sound Pressure Level L _{PA}	85.10 dB(A) K=3 dB(A)	
Sound Power Level L ^{WA}	98.10 dB(A) K=3 dB(A)	
Hand Arm Vibration	0.283m/s ² K=1.5m/s ²	
MODEL NUMBERS		
United Kingdom	230V: 090-0001	110V: 090-0002
United States	090-0003	
Europe	090-0004	

(1.6)

Note: The vibration measurement was made under standard conditions in accordance with: BS EN 61029-1:2009

The declared vibration total value has been measured in accordance with a standard test method and may be used for comparing one tool with another.

The declared vibration total value may also be used in a preliminary assessment of exposure.

(1.7)**VIBRATION**

WARNING: When using this machine the operator can be exposed to high levels of vibration transmitted to the hand and arm. It is possible that the operator could develop "Vibration white finger disease" (Raynaud syndrome). This condition can reduce the sensitivity of the hand to temperature as well as producing general numbness. Prolonged or regular users of this machine should monitor the condition of their hands and fingers closely. If any of the symptoms become evident, seek immediate medical advice.

- The measurement and assessment of human exposure to hand-transmitted vibration in the workplace is given in: BS EN ISO 5349-1:2001 and BS EN ISO 5349-2:2002
- Many factors can influence the actual vibration level during operation e.g. the work surfaces, condition and orientation and the type and condition of the machine being used. Before each use, such factors should be assessed, and where possible, appropriate working practices adopted. Managing these factors can help reduce the effects of vibration:

Handling

- Handle the machine with care, allowing the machine to do the work.
- Avoid using excessive physical effort on any of the machine's controls.
- Consider your security and stability, and the orientation of the machine during use.

Work Surface




- Consider the work surface material; its condition, density, strength, rigidity and orientation.









WARNING: The vibration emission during actual use of the power tool can differ from the declared total value depending on the ways in which the tool is used. The need to identify safety measures and to protect the operator are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle, such as the times the tool is switched off, when it is running idle, in addition to trigger time).

**(1.8)
LABELS & SYMBOLS**

WARNING: Do not operate this machine if warning and/or instruction labels are missing or damaged. Contact Evolution Power Tools for replacement labels.

Note: All or some of the following symbols may appear in the manual or on the product.

SYMBOL	DESCRIPTION
V	Volts
A	Amperes
Hz	Hertz
Min ⁻¹	Speed
~	Alternating Current
n ₀	No Load Speed
	Eye protection should be worn at all times when using this tool.
	Hard Hat - Head protection should be worn at all times whilst using this tool, to protect from overhead hazards.
	Ear protection / Ear defenders should be worn at all times whilst using this tool. This tool exceeds 85dB(A).

	Wear Dust Protection
	Electrical enclosure - risk of electric shock.
	Read and understand the instruction manual - before operating this tool.
	Warning
	Fuse
	CE certification
	CSA certification
	WEEE - Waste Electrical & Electronic Equipment. This machine should be disposed of as Electrical & Electronic Waste.

**(9.13)
INTENDED USE**

- This power tool is intended to be used for drilling holes with annular cutters and twist drills in an industrial environment.
- The machine is designed to be held onto a ferrous surface using its electromagnetic base.
- This power tool should be used in a weather protected environment, and be used with the accessories provided, or Evolution Power Tools recommended accessories only.
- The power tool can be used vertically, horizontally and in an inverted position, provided the magnetic adhesion and work environment allow.

WARNING: To prevent ingress of fluids into the electrical system, cutting paste should be used rather than cutting fluid when using the machine in the inverted position.

(9.14)

PROHIBITED USES

- This power tool should never be used without a ground or protective earth connection.
- This power tool should not be used in a potentially explosive environment.
- This power tool should not be used in a wet or humid environment where water could be drawn into the power tools cooling and ventilation system.
- If the power tool is used in the inverted or horizontal position, cutting fluids should not be used to prevent ingress of fluids into the electrical system. Cutting paste should be used instead.
- This power tool should never be positioned on a work piece between the electrode and ground of an arc type welder. Damage to the machine will result as the welder will ground through the power tools ground or earth cable.
- This power tool should not be used where the voltage is abnormally lower than the rated voltage, subject to voltage tolerances. Check the power tool rating plate, check the voltage available.

WARNING: Operating on a lower than rated voltage will result in the electro magnet being at reduced power and the machine may become insecure whilst cutting.

(1.13)

WARNING: This machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the safe use of the machine by a person responsible for their safety and who is competent in its safe use.

Children should be supervised to ensure that they do not have access to, and are not allowed to play with, this machine.

(1.14)

ELECTRICAL SAFETY

This machine is fitted with the correct moulded plug and mains lead for the designated market. If the supply cord is damaged, it must be replaced by a specific cord or assembly available from the manufacturers or its service agent.

(1.15)

OUTDOOR USE

WARNING: For your protection, if this tool is to be used outdoors it should not be exposed to rain, or used in damp locations. Do not place the tool on damp surfaces. Use a clean, dry workbench if available. For added protection use a residual current device (R.C.D.) that will interrupt the supply if the leakage current to earth exceeds 30mA for 30ms. Always check the operation of the residual current device (R.C.D.) before using the machine.

If an extension cable is required it must be a suitable type for use outdoors and so labelled. The manufacturer's instructions should be followed when using an extension cable.

(2.1)

POWER TOOL GENERAL SAFETY INSTRUCTIONS

(These General Power Tool Safety Instructions are as specified in BS EN 60745-1:2009 & EN 61029-1:2009)

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/ or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

(2.2)

1) General Power Tool Safety Warnings [Work area safety]

a) Keep work area clean and well lit.

Cluttered or dark areas invite accidents.

b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gasses or dust. Power tools create sparks which may ignite the dust or fumes.

c) Keep children and bystanders away while operating power tool. Distractions can cause you to lose control.

(2.3)

2) General Power Tool Safety Warnings [Electrical Safety]

a) Power tool plugs must match the outlet.

Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce the risk of electric shock.

b) Avoid body contact with earthed or grounded surfaces, such as tubes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

(2.4)

3) General Power Tool Safety Warnings [Personal Safety].

a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust masks, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

c) Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising the power tools that have the switch on invites accidents.

d) Remove any adjusting key or wrench before turning the power tool on.

A wrench or key left attached to a rotating part of a power tool may result in personal injury .

e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g) If devices are provided for the connection of dust extraction and collection facilities, ensure that these are connected and properly used. Use of dust collection can reduce dust-related hazards.

(2.5)

4) General Power Tool Safety Warnings [Power tool use and care].

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at a rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on or off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the power tool from the power source and/or battery pack from the power tool before making any adjustments, changing accessories or storing power tools. Such preventative safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of moving parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

(2.6)

5) General Power Tool Safety Warnings [Service]

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

(2.7)

HEALTH ADVICE

WARNING: When using this machine, dust particles may be produced. In some instances, depending on the materials you are working with, this dust can be particularly harmful. If you suspect that paint on the surface of material you wish to cut contains lead, seek professional advice. Lead based paints should only be removed by a professional and you should not attempt to remove it yourself. Once the dust has been deposited on surfaces, hand to mouth contact can result in the ingestion of lead. Exposure to even low levels of lead can cause irreversible brain and nervous system damage. Young and unborn children are particularly vulnerable.

You are advised to consider the risks associated with the materials you are working with and to reduce the risk of exposure. As some materials can produce dust that may be hazardous to your health, we recommend the use of an approved face mask with replaceable filters when using this machine.

You should always:

- Work in a well-ventilated area.
- Work with approved safety equipment, such as dust masks that are specially designed to filter microscopic particles.

(2.8)

WARNING: the operation of any power tool can result in foreign objects being thrown towards your eyes, which could result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shield or a full face shield where necessary.

EN

ES

FR

(9.0) **ADDITIONAL SAFETY INSTRUCTIONS**

WARNING: Mains Power Supply Security.
Due to the nature of operation of this machine, it is of the utmost importance to ensure the security and continuity of the mains power supply.

Ensure that this machine has a dedicated power supply, and use a lock on device to ensure that the mains power supply cannot be interrupted or compromised accidentally. Do not use other appliances on the same power socket, as any variation in voltage caused by other connected appliances could result in the magnet deactivating. Always use the tool on its own dedicated power socket.

Where the power supply is provided by an 'onsite' generator set, ensure that the generator set is reliable and well maintained, and that the fuel tank contains sufficient fuel to allow completion of the task. The addition of warning labels is strongly recommended.

(9.1) **1) TRANSPORTING and HANDLING.**

Magnetic Drills are heavy machines, care must be taken when transporting and handling.

- When transporting or moving the Magnetic Drill, always use the carrying handle or other carrying aids provided.
- Always ensure that the dovetail slide is in its lowest position and locked in place.
- Do not transport or move the Magnetic Drill with a cutter attached.
- If the coolant feed system is fitted, ensure that the coolant feed tap is in the off position, or the coolant system has been drained.
- If the Magnetic Drill is to be transported in a vehicle ensure that it is laid on its side and is secured to prevent movement.
- Do not transport the Magnetic Drill with the mains cord and plug dragging along the ground.
- Never carry or drag the machine using the mains cord.

(9.2) **Carrying your Magnetic Drill**

Safety Advice

- Although compact, this Magnetic Drill is heavy. To reduce the risk of back injury, get competent help, if required, whenever you have to lift the drill.
- To reduce the risk of back injury, hold the tool close to your body when lifting. Bend your knees so you can lift with your legs, not your back. Lift by using the transportation/lifting handle.
- Never carry the Magnetic Drill by the power cord. Carrying the Magnetic Drill by the power cord could cause damage to the insulation or the wire connections resulting in electric shock or fire.
- Before moving the Magnetic Drill tighten the auxiliary slide locking screw to guard against sudden unexpected movement.
- Lock the Drilling Head in its lowest position.

(9.3) **2) BEFORE USING THE MAGNETIC DRILL.**

- Check the mains cord and plug for any damage. If damaged it must be replaced before use.
- Check the complete machine for any signs of damage. If the machine is damaged it must not be used until it has been repaired.
- Check the security and condition of the guard. This machine must not be used without the guard being fitted.
- Ensure that the feed handles are attached securely.
- Check that the dovetail slide is correctly adjusted and operates smoothly without any binding or excessive sideways movement. The cutting head should not fall freely under its own weight.
- Check the condition of the webbing safety strap and adjustable buckle for any signs of damage or fraying. If damaged it must be replaced.
- Check that the secondary/auxiliary slide is securely locked by the locking lever.

(9.5)**3) ADJUSTING GIBS (Dovetail Slides)****FREE PLAY**

Before every use, lubricate and adjust as necessary. When adjusting the gib the following procedure must be followed.

- Using an 8mm AF spanner (not supplied), loosen the 7 locknuts. With all 7 locknuts loosened, ensure that the main slide is at the lowest position.
- Using the 2.5 mm Hex Key supplied, and starting with the lower adjusting screws and working upwards, turn the adjusting screws to eliminate any free movement.
- Operate the crank handle to move the slide up and down. There should be no free play, yet no binding anywhere throughout the range of travel.
- If necessary repeat the above procedure several times to ensure that all free movement has been eliminated and that the machine head moves up and down freely without any binding and without any side to side movement.
- Re-tighten the 7 locknuts when adjustment is complete.

(9.6)**4) COOLANTS and LUBRICANTS.**

The use of coolants or lubricants will ease the cutting operation and prolong the life of the cutter and the machine.

- When using coolants or lubricants, ensure that they do not run down the mains cord to the mains plug and supply outlet. Do not allow coolants or lubricants to enter the machine's ventilation openings.
- When using the machine in an inverted position or on vertical surfaces use cutting paste instead of a liquid cutting fluid.
- If the machine is to be used to cut materials that create dust, such as cast iron, dust extraction equipment (not supplied) should be used and/or the operator should wear a suitable respiratory protection mask.

(9.7)**5) PREPARATION and SETTING UP.**

The electromagnet on this machine is designed to adhere to ferrous metallic surfaces only.

WARNING: The use on any material whose thickness is less than that specified in this Instruction Manual will progressively reduce the magnetic performance, and could result in a potentially dangerous condition arising.

(9.9)

- Always prepare the material surface before attaching the machine. The material surface must be clean, flat and free from rust, protective coatings, grease or other debris such as chips or swarf from previously drilled holes.
- Always check the surface of the magnetic base ensuring that it is not damaged and is clear of debris such as shavings or swarf from previously drilled holes.
- Never use this machine on a structure where arc welding is taking place. Damage to the machine will result as the welder will ground through the power tools ground or earth cable.

(9.10)**6) DURING CUTTING OPERATIONS.**

WARNING: The swarf and the slug produced will be hot and sharp.

- When using annular cutters ensure that the slug ejected at the end of the cut will not endanger anyone in the vicinity.
- If working at height some form of collection device for the ejected slug may be necessary.
- Care should be taken with the ejected slug, this will be both hot and sharp, gloves should be worn when handling the slug.
- This power tool can be used on a vertical surface or upside down provided there is sufficient magnetic adhesion, extra care should be taken when drilling vertically or inverted. When using the machine vertically or inverted it is possible hot and sharp swarf or chips may fall. Always wear appropriate personal protective equipment.

EN

ES

FR

(9.11)

7) SAFETY STRAP OR SAFETY CHAIN

WARNING: The electromagnet base on this power tool can deactivate if the power supply is interrupted or suffers an electrical malfunction.

- To prevent possible operator injury, the safety strap or chain supplied should be used at all times to provide extra security in the event of supply failure or electrical malfunction.

Note: When drilling some very large flat, horizontal plates, the fitting of the safety strap or chain may be impossible. Consult the responsible person for guidance.

- The safety strap or chain should be attached to the fixing points provided and checked for security before commencing any and every drilling operation.

(4.1)

GETTING STARTED UNPACKING

Caution: This packaging contains sharp objects. Take care when unpacking. This machine could require two persons to lift, assemble and move. Remove the machine, together with the accessories supplied from the packaging. Check carefully to ensure that the machine is in good condition and account for all the accessories listed in this manual. Also make sure that all the accessories are complete. If any parts are found to be missing, the machine and its accessories should be returned together in their original packaging to the retailer. Do not throw the packaging away; keep it safe throughout the guarantee period. Dispose of the packaging in an environmentally responsible manner. Recycle if possible. Do not let children play with empty plastic bags due to the risk of suffocation.

(4.2)

ITEMS SUPPLIED

Description	Quantity
Instruction Manual	1
Coolant Tank System	1
Handles	3
Safety Strap	1
Safety Guard	1
Safety Guard Fixing Screws	2
Hex Key 2.5mm	1
Hex Key 4mm	1
Hex Key 5mm	1
Chuck with Chuck Key	1
Carry Case	1

(4.3)

ADDITIONAL ACCESSORIES

In addition to the accessories supplied with this machine the following accessories are available from Evolution's online shop at www.evolutionpowertools.com or from your local retailer.



(4.4)

Description
3 Piece Cutter Kit
6 Piece Cutter Kit
Cyclone Cutters

MACHINE OVERVIEW

A parts diagram can be downloaded from www.evolutionpowertools.com.

EN

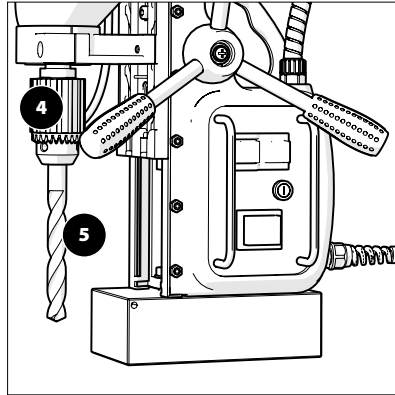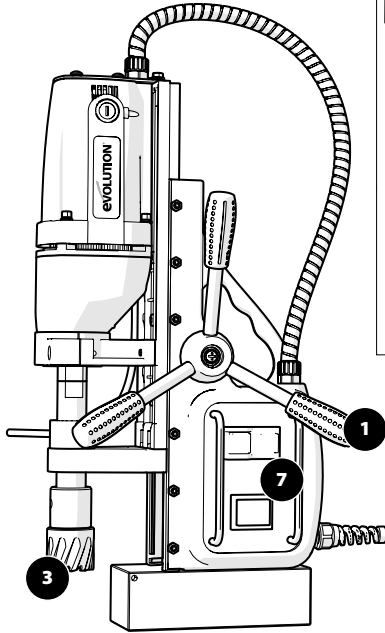

1. Spindle Hub & Handles

2. Coolant Tank

3. Annular Cutter


4. 3 Jaw Chuck

5. Twist Drill (Not included)

6. Arbor Support Bracket

7. Switch Panel

8. Magnetic Base

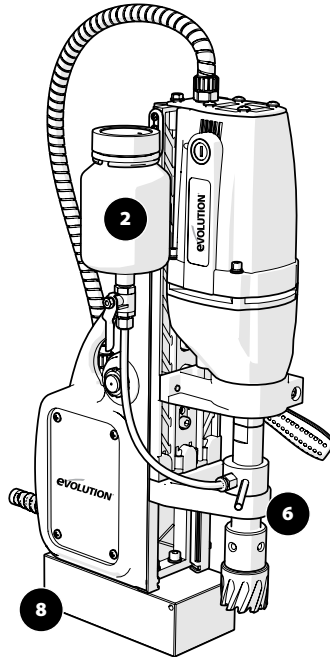

ES

FR

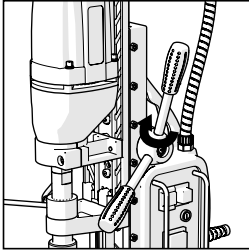


FIG. 1

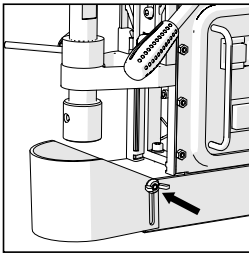


FIG. 2

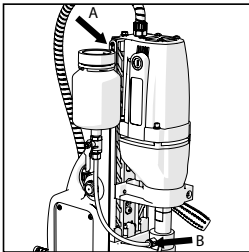


FIG. 3

(>9.15) ASSEMBLY AND PREPARATION

WARNING: This machine must not be connected to a power source until all assembly and preparation has been completed and a safety check carried out. (<9.15)

ASSEMBLY

Remove the machine from the case and check that all accessories are present and correct. Place the machine onto a clean, sturdy work surface.

- Attach the three handles into the spindle hub ensuring that they are fully seated. **(Fig. 1)**
- Attach the Safety Guard and secure in place using the supplied fixing screws. **(Fig. 2)**
- Attach the coolant tank and coolant hose to the left hand side of the machine. The coolant tube is a press fit into the connector on the coolant inlet body. **(Fig. 3b)** The coolant tank should be hung on the two protruding dome headed screws located at the top left hand edge of the machine's main body. **(Fig. 3a)**

(9.16)

Note: To release the delivery tube from the quick connector, push the collar towards the brass union and withdraw the delivery tube.

(9.17)

Note: For some operations it may be convenient to remove the coolant tank and supply tube, and to use alternative coolant application methods.




(>9.18) TESTING

WARNING: This machine has CLASS 1 insulation and **MUST** be earthed. Any power socket that this machine is connected to must be grounded to earth. Ensure that both operating switches are in the 'OFF' position before connecting the power cord to the socket.

WARNING: The power cord assembly is a custom terminated one. Replacement should only be carried out by a qualified technician. Only use replacement parts recommended by Evolution Power Tools.

(<9.18)

- Place the machine onto a piece of clean 10 mm thick mild steel plate that is larger than the magnetic base of the machine.
- Connect the plug into a mains supply socket.
- Switch on the socket (UK only).
- Operate the red rocker switch on the machine's switch panel to energise the magnet. **(Fig. 4a)**
- Operate the green push switch **(Fig. 4b)** on the machine's switch panel to switch on the motor and the Red push switch to switch off the motor. **(Fig. 4c)**
- Allow the motor to run for a few seconds to check for any unusual noise or vibration.
- Do not use the machine if any vibration or unusual noises are detected or if magnetic adhesion is questionable. Have the machine serviced by a qualified person, or if under warranty refer to the guarantee agreement.
- Turn 'OFF' the machine when all testing has been completed.

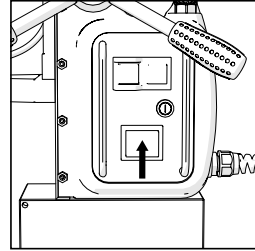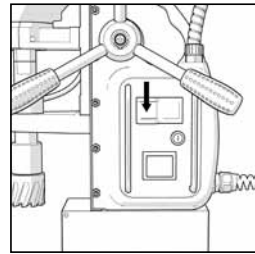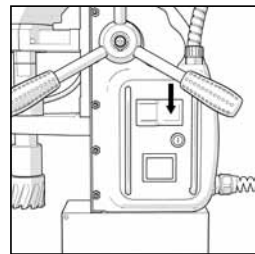**FIG. 4a****FIG. 4b****FIG. 4c**

EN

ES

FR

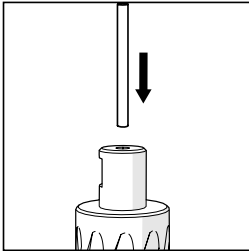


FIG. 5

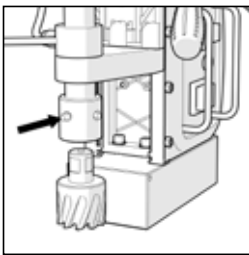


FIG. 6

CUTTING ADVICE

(9.19) INSTALLING A CUTTER

Select a cutter suitable for the operation to be performed. Check the cutter to ensure that it is sharp and is not damaged in any way.

- Insert the pilot pin into the cutter ensuring that it slides smoothly. **(Fig.5)**
- Raise the cutting head to its highest position.
- Check that the cutter securing set screws located in the arbor are not protruding into the spindle bore. **(Fig.6)**
- Align the two flats on the cutter shaft with the grub screws in the spindle.
- Start to tighten one of the grub screws and at the same time slightly rotate the cutter backwards and forwards until the grub screw is fully tightened. This will ensure that the grub screw is located squarely onto the flat preventing the cutter from becoming loose.
- Tighten the remaining grub screw.

(>9.12) SETTING UP

WARNING: Before using the machine ensure that you have read the sections on the intended and prohibited of use of this machine.

This machine should only be used for hole boring/drilling whilst attached to the work piece by the electromagnetic base.

WARNING: This machine is intended for use at any position, but only if the electromagnet is in full working order and has sufficient hold on the work piece material.

The safety strap or chain should be attached in case of power failure or machine malfunction.

The safety strap or chain should NOT be used as an alternative to the magnet for clamping purposes.

Always ensure the strap or chain is correctly fitted and the machine is secure BEFORE starting the machine.

(9.12<)

(9.20)

COOLANT / LUBRICANT FLOW.

Note: It is recommended that a Soluble Oil is used as other coolants/lubricants may have a high viscosity and may not flow easily to the cutter.

Ensure that the Coolant/Lubrication bottle is filled with suitable Coolant/Lubrication liquid and that the ON/OFF tap is in the ON position.

- Ensure that the work piece is flat, clean and free from any rust, coatings or other contamination.
- Position the machine onto the work piece.
- Connect the plug into a mains supply socket and switch on at the socket. (UK only)
- Energise the magnetic base by operating the Magnet 'ON/OFF' switch.

The machine should now be firmly attached to the mild steel plate.

Before commencing the cutting operation check that there is sufficient Coolant/Lubrication flow at the cutter.

To ensure Coolant/Lubrication flow:

- Loosen the Coolant/Lubrication bottle cap. This will prevent a vacuum being created that will stop the Coolant/Lubrication fluid from flowing.
- Gently squeeze the Coolant/Lubrication bottle to force the Coolant/Lubrication through to the cutter.
- Lower the cutting head towards the work piece until the cutter teeth touch the work piece and the pilot pin is depressed, then raise the cutting head.
- Continue this process until the Coolant/Lubrication fluid is flowing onto the work piece.

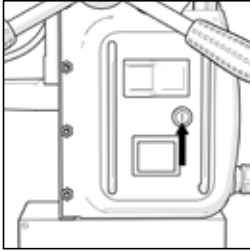


FIG. 7

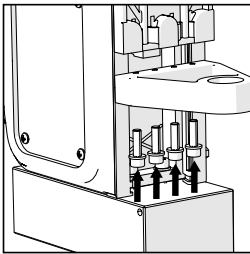


FIG. 8

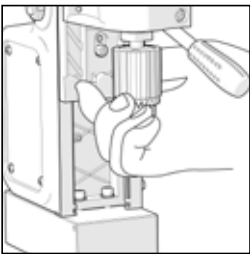


FIG. 9

OPERATION

MAKING A CUT

Note: This machine is fitted with a 10 Amp (5 x 20mm) Surge Fuse (**Fig. 7**). If the machine fails to operate check the fuse. If it has blown it must be replaced with an identical type.

- Correctly position the machine on the work piece, with the electro magnet energised **and with the safety strap secured in place.**
- Check for sufficient Coolant/Lubrication fluid flowing at the cutter.
- Start the motor by pushing the green switch, located in the machines switch panel.
- Using the feed handles slowly lower the cutting head until the cutter makes contact with the work piece.
- Continue to apply only sufficient pressure to allow the cutter to cut freely through the work piece.
- Depending on the thickness of the workpiece periodically raise the cutter to clear the swarf build up prior to continuing the cut.

WARNING: On completion of the cut the pilot pin will eject the material slug. This slug will be very hot with sharp edges. Use protective gloves if slug requires handling.

If the slug fails to be ejected from the cutter this could be caused by the slug becoming twisted inside the cutter. To release the slug lower the cutter onto a flat area of the work piece, this will square up the slug and allow it to be ejected.

INSTALLING THE 3 JAW CHUCK

The chuck (part HTA 153) can be fitted onto the EVOMAG28 machines main drive spindle, and this enables the EVOMAG28 to take standard twist drills up to $\varnothing 13\text{mm}$.

WARNING: Ensure that the machine is disconnected from the mains power supply when installing the 3 jaw chuck.

Note: The arbor of the EVOMAG28 Drilling System is machined to perfectly match the main drive spindle of the machine. Both parts are numbered with a unique code.

- Use a spanner (not supplied) to unscrew the arbor.
- Remove the arbor support bracket by removing the 4 x M5 socket headed bolts. (**Fig. 8**)
- Remove the coolant tank.
- Screw the chuck onto the main drive spindle. (**Fig. 9**)

(6) MAINTENANCE

(6.1)

Note: Any maintenance must be carried out with the machine switched off and disconnected from the mains/battery power supply.

Check that all safety features and guards are operating correctly on a regular basis. Only use this machine if all guards/safety features are fully operational.

All motor bearings in this machine are lubricated for life. No further lubrication is required.

Use a clean, slightly damp cloth to clean the plastic parts of the machine's. Do not use solvents or similar products which could damage the plastic parts.

WARNING: Do not attempt to clean by inserting pointed objects through openings in the machines casings etc. The machines air vents should be cleaned using compressed dry air.

Excessive sparking may indicate the presence of dirt in the motor or worn out carbon brushes.

(6.2)

If this is suspected have the machine serviced and the brushes replaced by a qualified technician. (<6.2)

(>6.5)

ADJUSTING GIBS (Dovetail Gibs Slides) FREE PLAY

Before every use, lubricate and adjust as necessary. (Fig. 10)

Refer to **ADDITIONAL SAFETY INSTRUCTIONS 3** for detailed instructions on the adjustment of the Dovetail Slides. (<6.5)

(6.4)

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

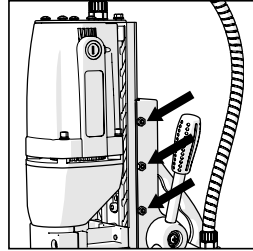


FIG. 10



DECLARATION OF CONFORMITY**The manufacturer of the product covered by this Declaration is:**

Evolution Power Tools, Venture One, Longacre Close, Holbrook Industrial Estate, Sheffield, S20 3FR.

The manufacturer hereby declares that the machine as detailed in this declaration fulfils all the relevant provisions of the Machinery Directive and other appropriate directives as detailed below. The manufacturer further declares that the machine as detailed in this declaration, where applicable, fulfils the relevant provisions of the Essential Health and Safety requirements.

The Directives covered by this Declaration are as detailed below:

- 2006/42/EC.** Machinery Directive.
- 2006/95/EC.** Low Voltage Equipment Directive.
- 2004/108/EC.** Electromagnetic Compatibility Directive.
- 93/68/EC.** The CE Marking Directive.
- 2002/95/EC.** The Restriction of the Use of Certain Hazardous Substances in Electrical Equipment (RoHS) Directive.
- 2002/96/EC as amended by 2003/108/EC.** The Waste Electrical and Electronic Equipment (WEEE) Directive.

And is in conformity with the applicable requirements of the following documents


**EN55014-1:2006 • EN55014-2;1997+A1+A2 • EN61000-3-2:2000
EN61000-3-3:1995+A1+A2 • EN61029-2-9:2002 • EN60825-1:1994+A1+A2
EN61029-1:2009 • ENISO12100-2/A1:2009 • ENISO12100-2:2003**

Product Details

Brand	Evolution
Product Code	EVOMAG28
Description	28mm (1-1/8") Magnetic Drill
Voltage	110V / 120V / 230V
Input	50Hz / 60Hz

The technical documentation required to demonstrate that the product meets the requirements of directive has been compiled and is available for inspection by the relevant enforcement authorities, and verifies that our technical file contains the documents listed above and that they are the correct standards for the product as detailed above.

Name and address of technical documentation holder.

Signed:  Print: Steven Bulloss - Operations Director

Signed:  Print: Lettie Lui - Product Manager

Date: 16.10.13

evOLUTION®

www.evolutionpowertools.com

UK

Evolution Power Tools Ltd
Venture One
Longacre Close
Holbrook Industrial Estate
Sheffield
S20 3FR

+44 (0)114 251 1022

US

Evolution Power Tools LLC
8363 Research Drive
Davenport
Iowa
52806

866-EVO-TOOL

JP

エボリューション
パワーツール株式会社
〒544-0031
大阪府大阪市生野区
鶴橋5丁目21-19

0120-051-415

EU

Evolution Power Tools Ltd
61 Avenue Lafontaine
33560
Carbon-Blanc
Bordeaux

+ 33 (0)5 57 30 61 89

Discover Evolution Power Tools

Visit: www.evolutionpowertools.com or download the QR Reader App on your smart phone and scan the QR code (Right).

